



Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty	Part No	Description	Q'ty
1011	Cylinder head (L)	2	4011	Crankcase	1	4965	Adjusting bolt	1
1012	Cylinder head (H)	1	4014	Expanding hushing	1	4966	Oil seal	1
1021	Head packing (L)	2	4060	Breathing cap assy	1	4969	Set nut	1
1022	Head packing (H)	1	4091	Oil plug	1	4970	Regulator valve body	1
1031	Set bolt (L)	8	4092	O-ring	1	4971	Outer gear	1
1032	Set bolt (H)	4	4200	Oil gauge assy	1	4975	O-ring	1
1038	Spring washer (L)	8	4221	Seal ring	1	4976	O-ring	1
1039	Spring washer (H)	4	4321	Bearing case	1	4981	Inner gear	1
1051	Unloading nut (L)	2	4351	O-ring	1	4991	Pump body packing	1
1052	Unloading nut (H)	1	4371	Set bolt	6	4992	Oil filter fitting	1
1060	Unloading piston (L)	2	4411	Front bearing seal	1	5011	Piston (L)	2
1061	Unloading piston (H)	1	4412	Front bearing	1	5012	Piston (H)	1
1068	O-ring (L)	2	4421	Rear bearing seal	1	5021	Compression ring (I,L)	2
1069	O-ring (H)	1	4422	Rear bearing	1	5022	Compression ring (I,H)	1
1072	Unloading holder (H)	1	4711	Crank shaft	1	5026	Compression ring (II,L)	2
1077	Unloading fork guide (H)	1	4731	Flywheel	1	5027	Compression ring (II,H)	1
1081	Unloading fork (L)	2	4732	Set bolt	1	5031	Oil scraper ring (L)	4
1082	Unloading fork (H)	1	4735	Fan	1	5035	Oil scraper ring (H)	1
1087	Unloading spring (L)	2	4736	Set bolt	4	5111	Piston pin (L)	2
1088	Unloading spring (H)	1	4740	Spring washer	4	5112	Piston pin (H)	1
2000	Valve assy (L)	2	4761	Thrust washer	1	5211	Piston pin snap ring (L)	4
2001	Valve assy (H)	1	4781	Spring washer	1	5212	Piston pin snap ring (H)	2
2591	Valve packing (L)	2	4811	Flywheel key	1	5711	Connecting rod (L)	2
2592	Valve packing (H)	1	4821	Stop washer	1	5712	Connecting rod (H)	1
3011	Cylinder (L)	2	4831	Snap ring	1	7251	Oil drain-plug	1
3012	Cylinder (H)	1	4911	Pump body	1	7253	Oil drain-washer	1
3021	Cylinder packing (L)	2	4921	Pump shaft	1	7310	Filter assy	2
3022	Cylinder packing (H)	1	4931	Pump bolt	1	7312	Filter element	2
3033	Set bolt (L)	8	4941	O-ring	1	7350	Oil filter	1
3034	Set bolt (H)	4	4951	Pump cover	1	8222	Pump tube (L)	1
3035	Set nut (L)	8	4955	Pump cover bolt	3	8223	Pump tube (H)	1
3036	Set nut (H)	4	4962	Pump piston	1	9011	Pressure gauge (oil)	1
3038	Spring washer (L)	8	4963	Spring case	1	9221	Oil pressure switch	1
3039	Spring washer (H)	4	4964	Spring	1			

Note: Specification subject to change without notice.