



SV-205 COMPRESSOR BODY

Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty	Part No	Description	Q'ty
1011	Cylinder head	2	3038	Washer	8	4821	Stopping washer	1
1021	Head packing	2	4011	Crankcase	1	4831	Snap ring	1
1031	Set bolt	8	4060	Breathing cap	1	5011	Piston	2
1038	Washer	8	4071	Steel ball	1	5021	Compression ring (I)	2
1051	Unloading nut	2	4083	O-ring	1	5022	Compression ring (II)	2
1060	Unloading piston	2	4091	Oil plug	1	5031	Oil scraper ring	4
1068	Unloading piston rod	2	4092	O-ring	1	5111	Piston pin	2
1081	Unloading fork	2	4211	Oil gauge	1	5211	Snap ring	4
1087	Unloading spring	2	4221	Seal ring	1	5711	Connecting rod	2
1089	Spring seat	2	4291	Level plate	1	5715	Connecting rod	2
2000	Inlet valve set	2	4321	Bearing case	1	5781	Crank pin bush	2
2011	Inlet valve seat	2	4351	Bearing case packing	1	5921	Oil splash dipper	1
2031	Inlet valve plate	2	4371	Set bolt	4	5931	Set bolt	2
2041	Valve bolt	2	4412	Front bearing	1	5941	Set nut	2
2051	Valve bolt	2	4421	Rear bearing seal	1	5951	Washer	2
2511	Outlet valve seat	2	4422	Rear bearing	1	7251	Oil drain-plug	1
2531	Outlet valve plate	2	4511	Front cover	1	7253	Oil drain-washer	1
2541	Outlet valve spring	2	4711	Crank shaft	1	7310	Filter assy	2
2591	Valve packing	2	4731	Flywheel	1	7312	Filter element	2
3011	Cylinder	2	4732	Set bolt	1			
3021	Cylinder packing	2	4761	Flywheel washer	1			
3033	Set bolt	8	4781	Spring washer	1			
3035	Set nut	8	4811	Flywheel key	1			

Note: Specification subject to change without notice.