



Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty	Part No	Description	Q'ty
1011	Cylinder head	3	4411	Front bearing seal	1	4969	Set nut	1
1021	Head packing	3	4412	Front bearing	1	4970	Regulator valve body	1
1031	Set bolt	12	4421	Rear bearing seal	1	4971	Outer gear	1
1038	Spring washer	12	4422	Rear bearing	1	4975	O-ring	1
1051	Unloading nut	3	4711	Crank shaft	1	4976	O-ring	1
1060	Unloading piston	3	4731	Flywheel	1	4981	Inner gear	1
1068	O-ring	3	4732	Set bolt	1	4991	Pump body packing	1
1081	Unloading fork	3	4735	Fan	1	4992	Oil filter fitting	1
1087	Unloading spring	3	4736	Set bolt	4	5011	Piston	3
2000	Valve assy	3	4740	Spring washer	4	5021	Compression ring (I)	3
2591	Valve packing	3	4761	Thrust washer	1	5022	Compression ring (II)	3
3011	Cylinder	3	4781	Spring washer	1	5031	Oil scraper ring	6
3021	Cylinder packing	3	4811	Flywheel key	1	5111	Piston pin	3
3033	Set bolt	12	4821	Stop washer	1	5211	Piston pin snap ring	6
3035	Set nut	12	4831	Snap ring	1	5711	Connecting rod	3
3038	Spring washer	12	4911	Pump body	1	7251	Oil drain-plug	1
4011	Crankcase	1	4921	Pump shaft	1	7253	Oil drain-washer	1
4014	Expanding bushing	1	4931	Pump bolt	4	7310	Filter assy	3
4060	Breathing cap assy	1	4941	O-ring	1	7312	Filter element	3
4091	oil plug	1	4951	Pump cover	1	7350	Oil filter	1
4092	O-ring	1	4955	Pump cover bolt	3	8222	Pump tube (I)	1
4200	Oil gauge assy	1	4962	Pump piston	1	8223	Pump tube (II)	1
4221	Seal ring	1	4963	Spring seat	1	9011	Pressure gauge (oil)	1
4321	Bearing case	1	4964	Spring	1	9221	Oil pressure switch	1
4351	Bearing case packing	1	4965	Adjusting bolt	1			
4371	Set bolt	6	4966	Oil seal	1			

Note: Specification subject to change without notice.