



Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty
1	Crankcase	1	20	Packing	2
2	Motor	1	21	Cylinder head	2
3	Set bolt	4	22	Set bolt	8
4	Spring washer	4	23	Set bolt	2
5	Crank shaft	1	24	Spring washer	10
6	Connecting rod assy.	2	25	Fan shaft	1
7	Spacer ring	1	26	Set bolt	1
8	Set bolt	1	27	Spring washer	1
9	Set nut	1	28	Front cover	1
10	Piston	2	29	Set bolt	4
11	Piston pin	2	30	Spring washer	4
12	Set bolt	4	31	Fan	1
13	Compressor ring	4	32	Set bolt	1
14	Spring plate	4	33	Washer	1
15	Guide ring	2	34	Guide wind cover	1
16	O ring	2	35	Set bolt	3
17	Cylinder	2	36	Spring washer	3
18	Packing	2	37	Air cleaner assy.	2
19	Valve assy.	2			

Note: Specification subject to change without notice.

[www.ikhua.com.my](http://www.ikhua.com.my)