



SW-415 COMPRESSOR BODY

Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty	Part No	Description	Q'ty
1011	Cylinder head	4	4060	Breathing cap	1	4811	Flywheel key	1
1021	Head packing	4	4071	Steel ball	1	4821	Stopping washer	1
1031	Set bolt	16	4083	O-ring	1	4831	Snap ring	1
1038	Washer	16	4091	Oil plug	1	5011	Piston	4
1051	Unloading nut	4	4092	O-ring	1	5021	Compression ring (I)	4
1060	Unloading piston	4	4211	Oil gauge	1	5022	Compression ring (II)	4
1068	Unloading piston rod	4	4221	Seal ring	1	5031	Oil scraper ring	8
1081	Unloading fork	4	4291	Level plate	1	5111	Piston pin	4
1087	Unloading spring	4	4321	Bearing case	1	5211	Snap ring	8
1089	Spring seat	4	4351	Bearing case packing	1	5711	Connecting rod	2
2000	Inlet valve set	4	4371	Set bolt	6	5715	Connecting rod	2
2011	Inlet valve seat	4	4412	Front bearing	1	5781	Crank pin bush	4
2031	Inlet valve plate	4	4421	Rear bearing seal	1	5921	Oil splash dipper	2
2041	Valve bolt	4	4422	Rear bearing	1	5931	Set bolt	4
2051	Valve bolt	4	4511	Front cover	1	5941	Set nut	4
2511	Outlet valve seat	4	4512	Front cover body	1	5951	Washer	4
2531	Outlet valve plate	4	4532	Front cover packing	1	7251	Oil drain-plug	1
2541	Outlet valve spring	4	4711	Crank shaft	1	7253	Oil drain-washer	1
2591	Valve packing	4	4731	Flywheel	1	7310	Filter assy	4
3011	Cylinder	4	4732	Set bolt	1	7312	Filter element	4
3021	Cylinder packing	4	4735	Fan	1			
3033	Set bolt	16	4736	Fan bolt	4			
3035	Set nut	16	4740	Fan washer	4			
3038	Washer	16	4761	Flywheel washer	1			
4011	Crankcase	1	4781	Spring washer	1			

Note: Specification subject to change without notice.