



Compressor Spare Parts List

Part No	Description	Q'ty	Part No	Description	Q'ty	Part No	Description	Q'ty
1011	Cylinder head	2	4011	Crankcase	1	4761	Flywheel washer	1
1021	Head packing	2	4016	Left side cover	1	4771	Set nut	1
1031	Set bolt	12	4017	Right side cover	1	4735	Fan	1
1038	Spring washer	12	4021	Left side cover packing	1	4811	Flywheel key	1
1041	Valve cover	2	4022	Right side cover packing	1	4900	Pump assy	1
1045	Set bolt	4	4150	Oil filler assy	1	5011	Piston	2
1046	Spring washer	4	4161	Oil filler packing	1	5021	Compression ring	2
1051	Unloading nut	2	4200	Oil gauge assy	1	5022	Compression ring	2
1087	Unloading spring	2	4311	Front bearing case	1	5023	Compression ring	2
1099	Inlet valve assy	2	4321	Bearing case	1	5031	Oil scraper ring	2
1101	Diaphragm	2	4331	Bearing adjusting cover	1	5032	Oil scraper ring	2
1123	Outlet valve holder	2	4332	O-ring	1	5111	Piston pin	2
1129	O-ring	2	4341	Front bearing case packing	1	5211	Piston pin snap ring	4
1131	Suction flange	2	4351	Bearing case packing	1	5716	Connecting rod assy	2
2000	Inlet valve assy	2	4411	Front bearing seal	1	7251	Oil drain-plug	1
2092	Valve packing	2	4412	Front bearing	1	7310	Filter assy	2
2500	Outlet valve assy	2	4421	Rear bearing seal	1	7312	Filter element	2
2591	Valve packing	2	4422	Rear bearing	1	7350	Oil filter	1
3011	Cylinder	2	4711	Crank shaft assy	1	9221	Oil pressure switch	1
3021	Cylinder packing	2	4731	Flywheel	1			

Note: Specification subject to change without notice.

www.ikhua.com.my